

ADA iVotronic Voting Instructions

Keypad:

Diamond-shaped button

Up-arrow Button

Down-arrow button

Vote button

Ballot style:

To listen to an audio ballot, the voter must wear an audio headset.

An audio ballot is selected by pressing the diamond-shaped button on the Voting Instructions screen.

The iVotronic will prompt the poll worker to remove the PEB. Once the PEB is removed, only the message “Audio Assisted Ballot is Selected” will appear on the screen.

Language Instructions:

If more than one language is available, begin listening to the available languages by pressing the diamond-shaped button.

To select a language, press the diamond-shaped button.

To hear the next language, press the down-arrow button.

To hear the previous language again, press the up-arrow button.

Voting Instructions:

To repeat instructions, press the up-arrow button.

To skip the voting instructions, and enter the ballot, press the diamond-shaped button at any time during the instructions audio.

To begin voting, press the diamond-shaped button.

To move from contest to contest, use the arrow-shaped buttons to move up and down the contest titles.

To select a contest, locate the contest by using the up or down arrow button and press the diamond-shaped button. The first candidate or selection will be read.

Use the up- and down- arrow button to move from one candidate or selection to the next.

When you locate the candidate or selection of your choice, press the diamond-shaped button to vote for that candidate or selection. You may change your vote at any time until you cast your ballot.

To move to the next contest, use the down-arrow button until you reach the end of the candidate or selection list. When you reach the next contest, the title will automatically play.

To move to the previous contest, use the up-arrow until you pass the current contest title. When you reach the previous contest, the title will automatically play.

Note: When scrolling through contests, candidates, or the audio alphabet for write-ins, you do not need to wait for the entire voice file to play before proceeding. This can be especially helpful when scrolling through the audio alphabet. You may press the up or down arrow buttons several times to skip ahead to get to a desired alpha character, race, or candidate.

Write-In Instructions:

Use the up and down arrows to move through the available characters.

To select a character, listen to it play, and then press the diamond-shaped button.

When you are finished entering the write-in name, use the up or down arrow to go beyond the end of the alphabet and play the word "Accept."

To accept the write-in, press the diamond shaped button. Your complete write-in entry will be played, and then you will be returned to the ballot.

To begin the write-in process, press the diamond-shaped button.

Navigating to the End of the Ballot:

To reach the end of the ballot, use the down arrow button to move through the contest titles. When you reach the end of the ballot, you will be prompted to either review your ballot or press the Vote button at the top-center of the terminal. When the Vote button is pressed, you will be notified of any un-voted or under-voted contests, or if the ballot has been left blank. If required, you may be prompted to review your ballot before you cast your ballot. During the Summary Ballot, you can make any changes before casting the ballot or pressing the Vote button a second time to cast the ballot.

Casting a Ballot:

To cast your ballot, press the Vote button located at the top-center of the voting machine.

Arkansas Secretary of State
Elections Division State Capitol, Room 026 Little Rock, AR 72201
1-800-482-1127

www.VoteNaturally.org